RadioShack
www.radioshack.com℠

QUICK START

ENGLISH
43-3529/3598

2.4GHz Multi Handset Expandable Cordless Telephone

with Call Waiting/Caller ID

Refer to your Owner's Manual for complete instructions.

BATTERY INSTALLATION

1. Remove the cover.
2. Connect the battery pack according to the correct polarity.
3. Replace the cover.

CONNECTIONS

1. Plug the AC adapter into the base unit. Plug the other end into a 120V AC outlet.
2. Place the handset in the base.
3. Plug the telephone cord into the base unit. Plug the other end of the cord into a telephone wall jack.

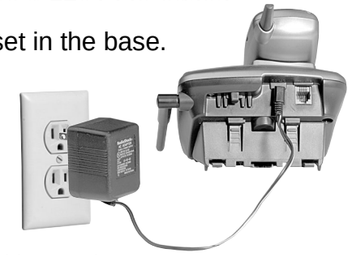

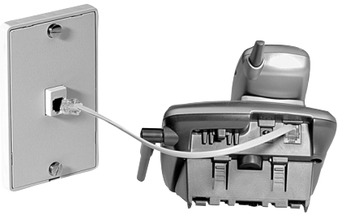

CALLER ID OPTIONS

1. Press **MENU/MUTE**.
2. Press ▲ or ▼ to select Caller ID Setup. Then, press **SEL/CH**.
3. Press ▲ or ▼ to select AutoTalk, CIDCW, or Area Code. Then, press **SEL/CH**.
4. Press ▲ or ▼ to change the option setting.
5. Press **SEL/CH** and return the handset to the base.

MAKING CALLS

1. Lift the handset, press **TALK/FLASH**, and dial the number. Or, dial the number and then press **TALK/FLASH**.
2. When you are finished, press **END**.

RECEIVING CALLS

1. Lift the handset and press **TALK/FLASH**.

   If AutoTalk is on, simply lift the handset to talk. If the handset is away from the base, press **TALK/FLASH** or any number key to answer.

2. When you are finished, place the handset on the base or press **END**.

© 2003 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

04A03
UCZZ69806ZZ
Printed in China